



INSTALLATION INSTRUCTIONS: 47" HIGH PREMIUM STEEL FREON STORAGE UNIT

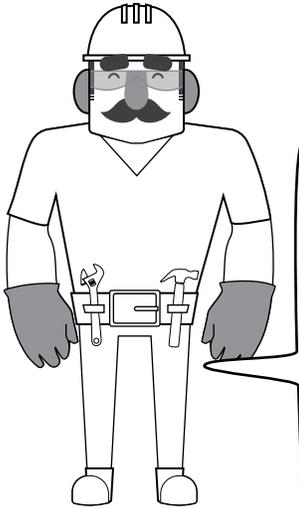


TOOLS NEEDED:

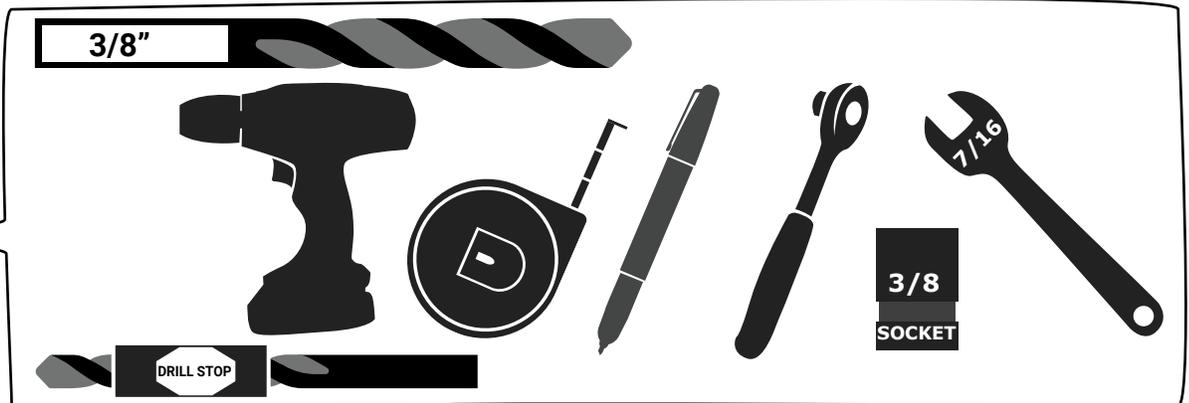

CAUTION:

This equipment is designed to be professionally installed by an approved upfitter. Always wear the appropriate Personal Protection Equipment as outlined by your local government and exercise caution when installing Westcan Manufacturing products. Westcan Manufacturing is not responsible for any damage done to the vehicle resulting from a poorly planned and/or executed installation. Both the installer and vehicle owner accept responsibility to properly install and operate Westcan Manufacturing products.

**THESE INSTRUCTIONS APPLY TO PART NUMBER
- 52-6300**

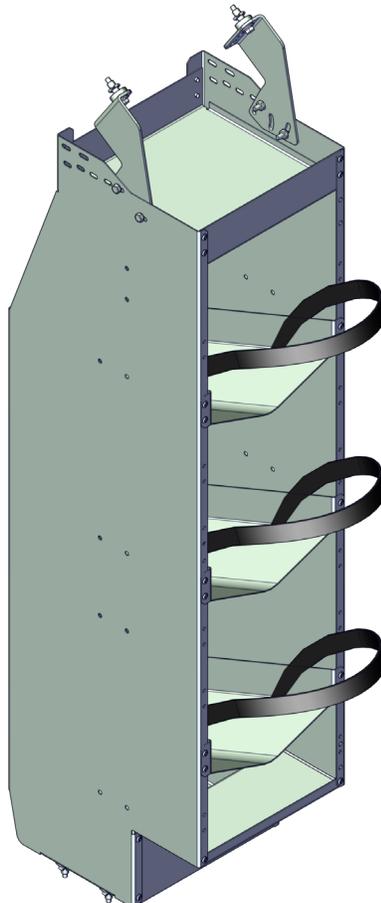

PREPARATION:

1. Ensure all parts are present and accounted for before installation. Plan the location of your installation ahead of time. Make sure your installation location does not impede any other components you are installing or damage the safety and functionality of your vehicle.
2. Every installation is different and can present its own unique challenges. Some hardware and interior trim may need to be altered to fit unique applications.
3. Exercise extreme diligence when drilling holes into a motor vehicle. Increasing complexity and model year changes can alter the location of fuel, hydraulic and electrical lines. Please visually inspect all locations prior to drilling.

CAUTION: 

4. Use drill stops whenever drilling a hole in your vehicle. Set the drill stop depth to the minimum effective depth required to drill the hole.

INSERT NUT INSTALLATION:

**REFER BACK
WHEN INSERT
NUT IS USED.**

Insert Nut For Up To 1/4" Thick Material.

Drill A 3/8" Hole For Insert Nut

Exposed Metal Floor or Rib.

1" Counter-bore Through Plywood Floor or Rubber Floor Mat and Install 1" Aluminum Spacers.


Black 1/4" X 2-1/4" Install Bolt

1/4" Washer


Install Tool

Insert Nut





- Torque to 25 ft-lb to fully collapse the insert nut.

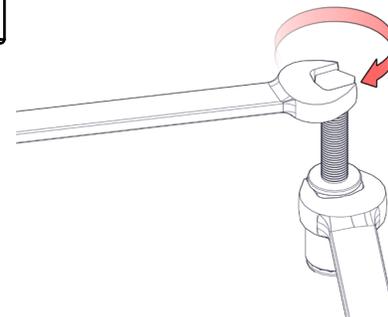



BUCKLE STRAP INSTALL PROCEDURE

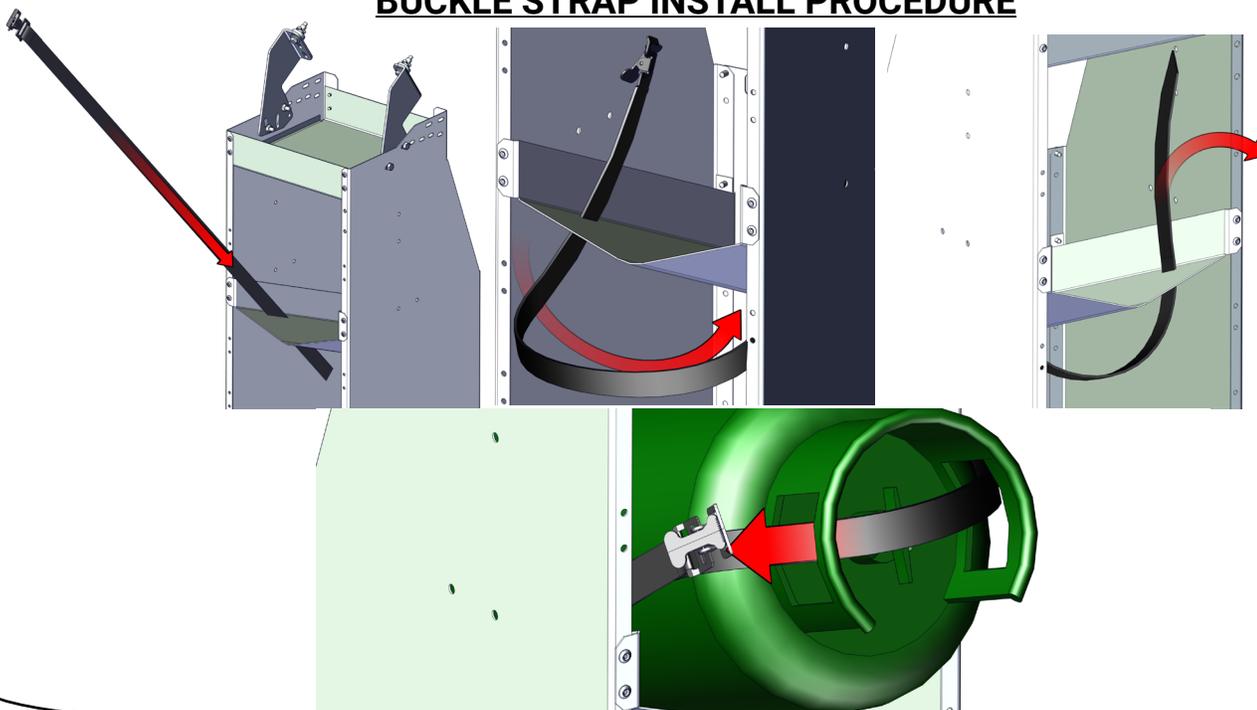

1.

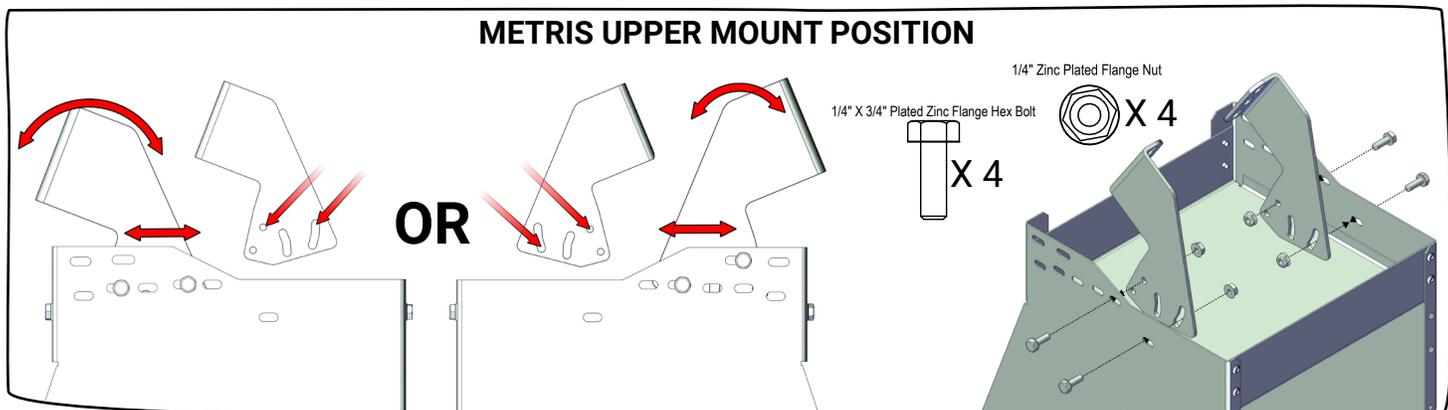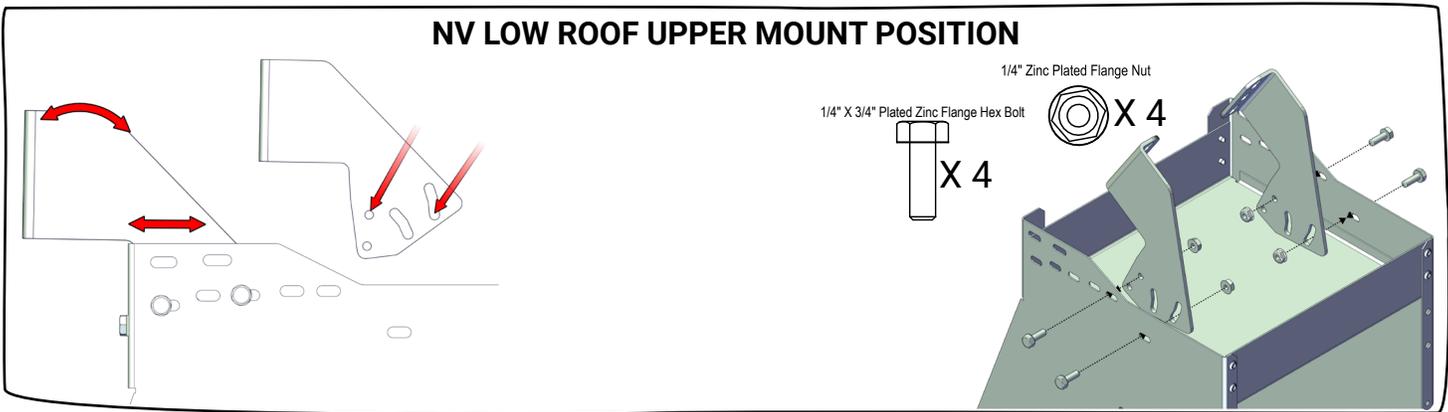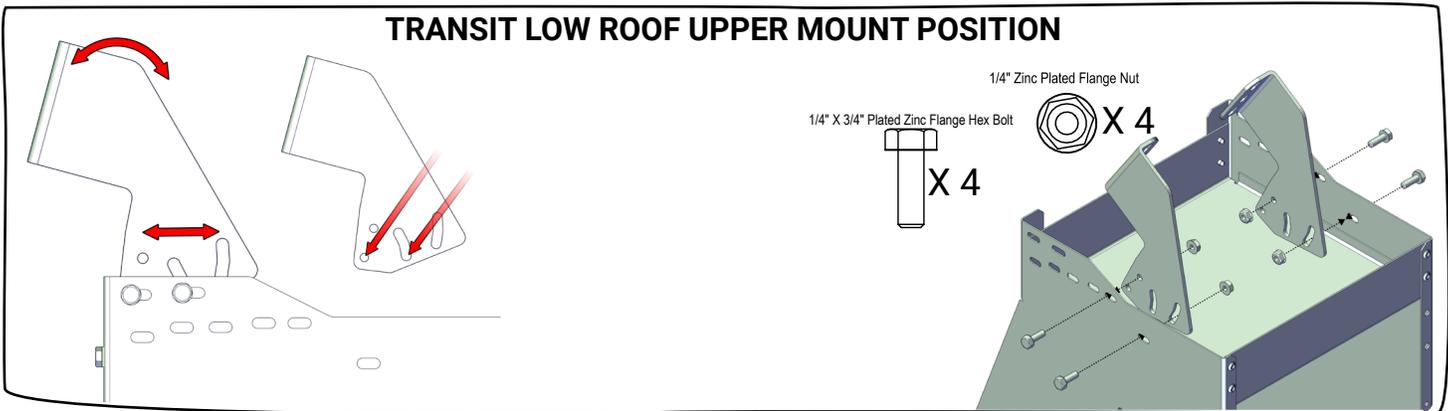
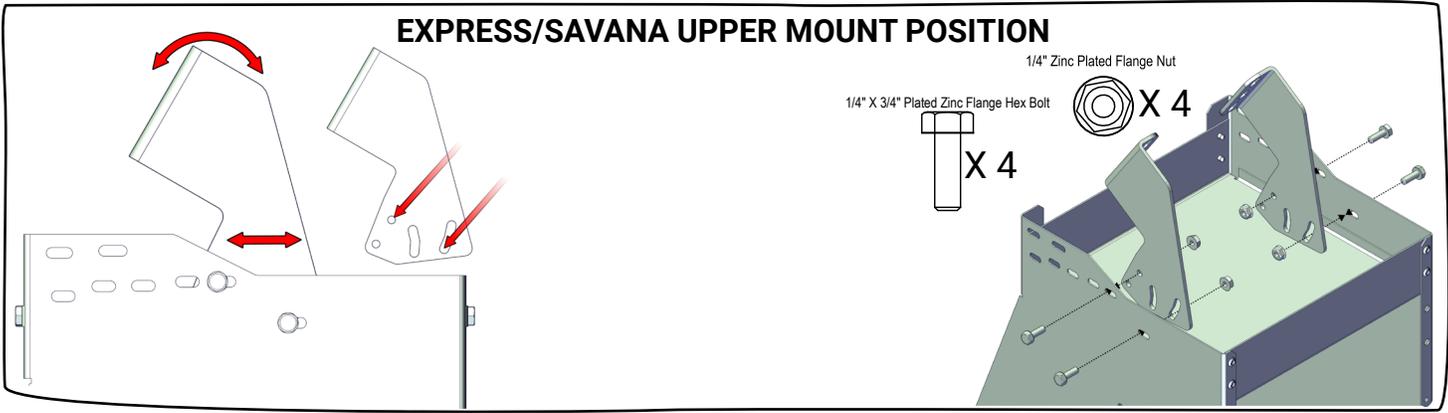


2. TYPICAL INSTALLATION SHOWN; VISUAL DETAILS MAY VARY FROM YOUR INSTALLATION.

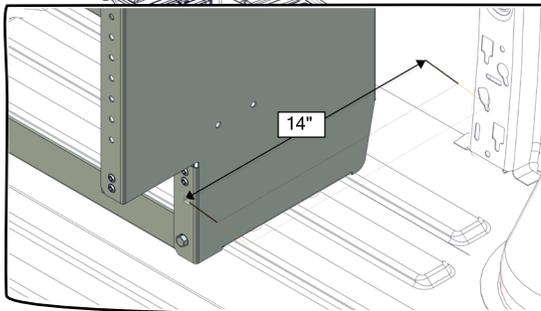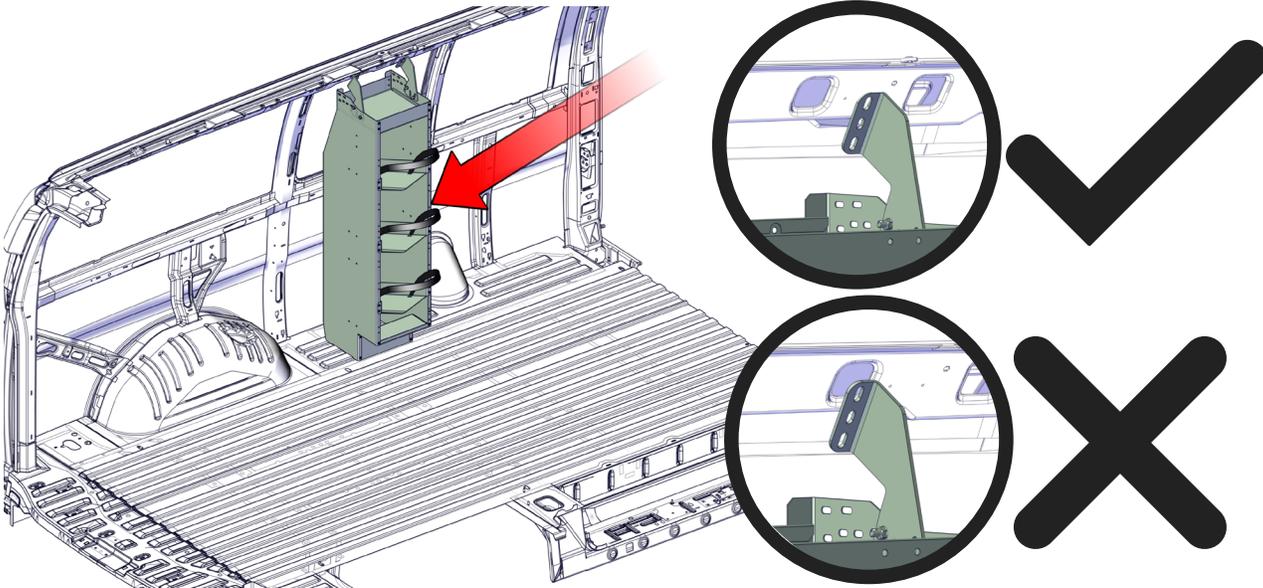



14"

EXPRESS/SAVANA END PANEL SPACING FROM WALL.

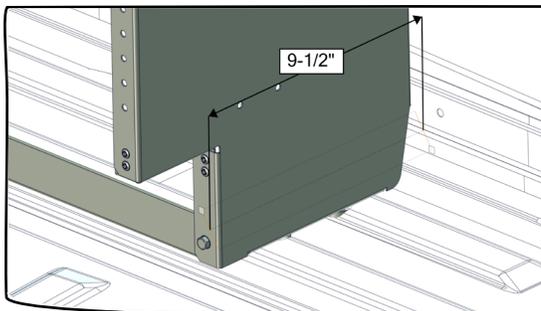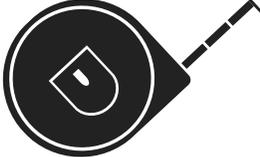


9-1/2"

METRIS END PANEL SPACING FROM WALL.

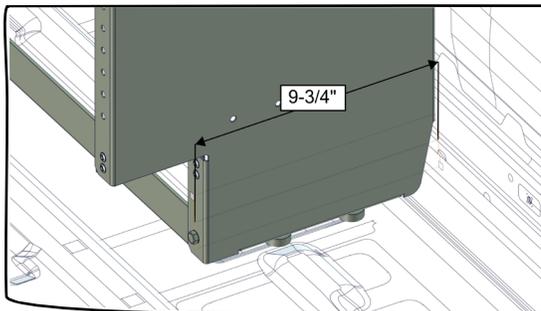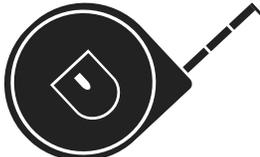


9-3/4"

NV LOW ROOF END PANEL SPACING FROM WALL.

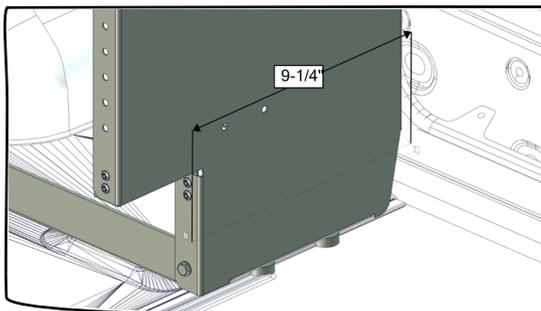


9-1/4"


TRANSIT LOW ROOF END PANEL SPACING FROM WALL.

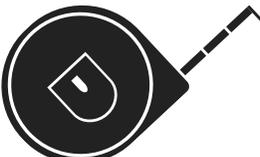



3.

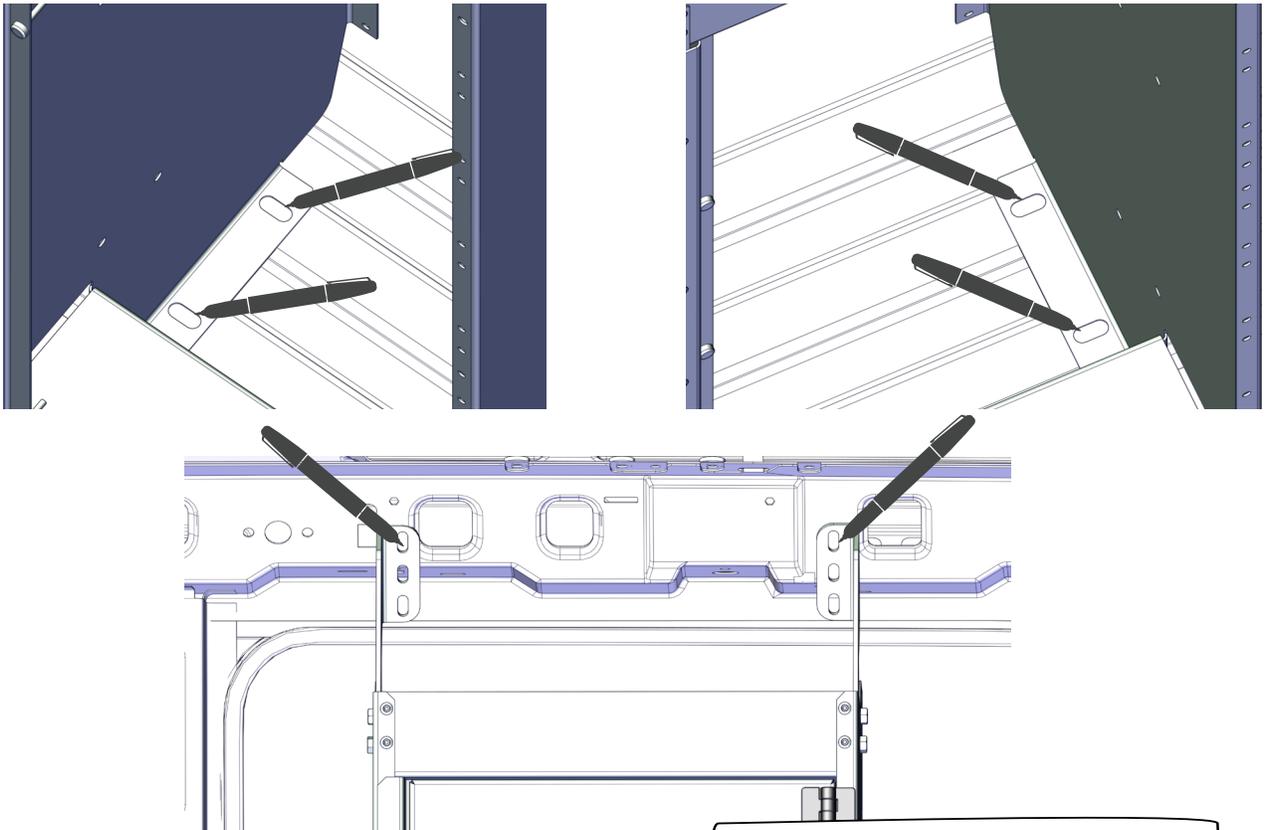

4.

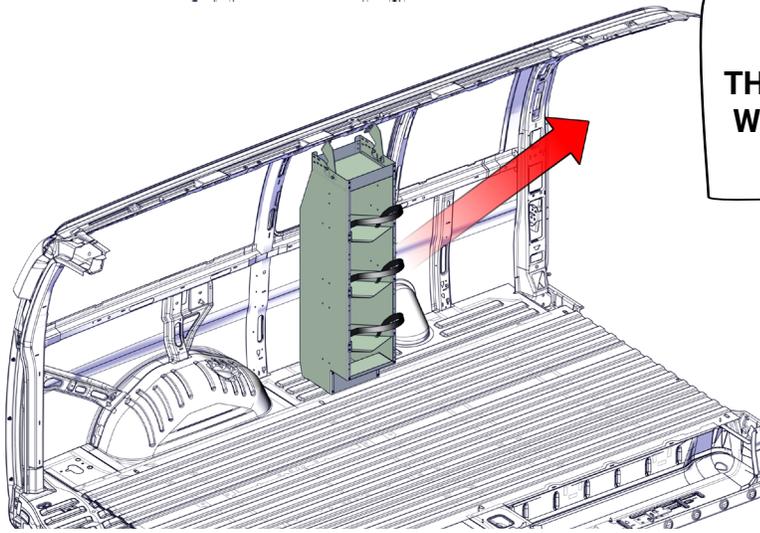


REMOVE UNIT AND DRILL THROUGH MARKED LOCATIONS WITH A 3/8" DRILL BIT FOR INSERT NUTS.

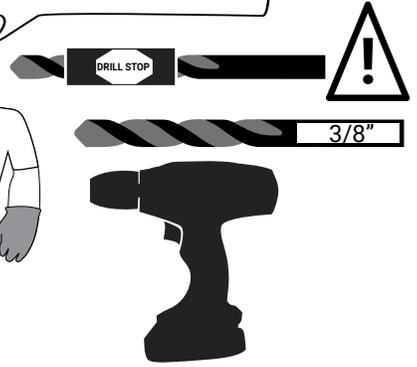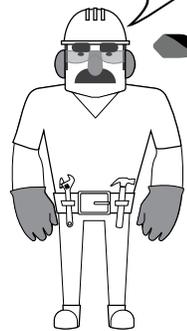



5.

1/4" - 20 Zinc Plated Insert Nut



SEE PAGE 2 FOR INSERT NUT INSTALL PROCEDURE.




X6

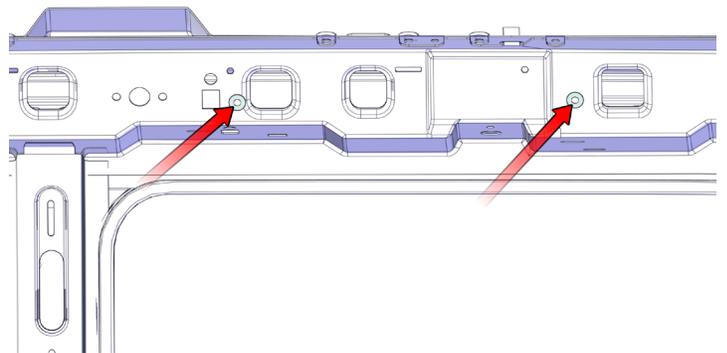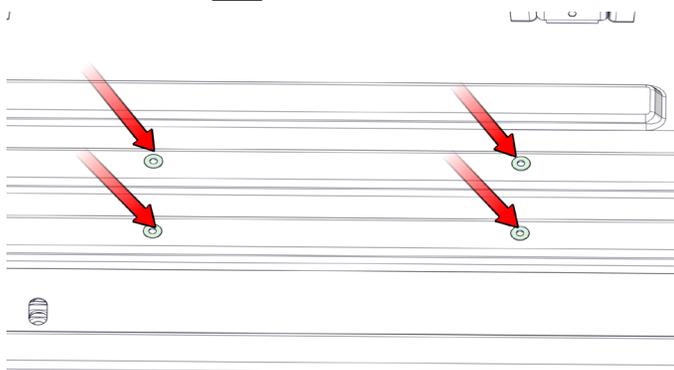



PRO-TIPS

IF THE END PANEL MOUNTING SLOTS DO NOT REST ON A FLOOR RIB: USE THE PROVIDED SPACERS WHEN MOUNTING TO THE FLOOR.

IF THE BRACKET DOES NOT SIT FLUSH TO THE CEILING RIB: USE THE PROVIDED SPACERS WITH THE UPPER MOUNTING BRACKET

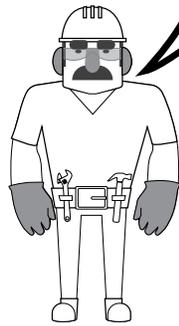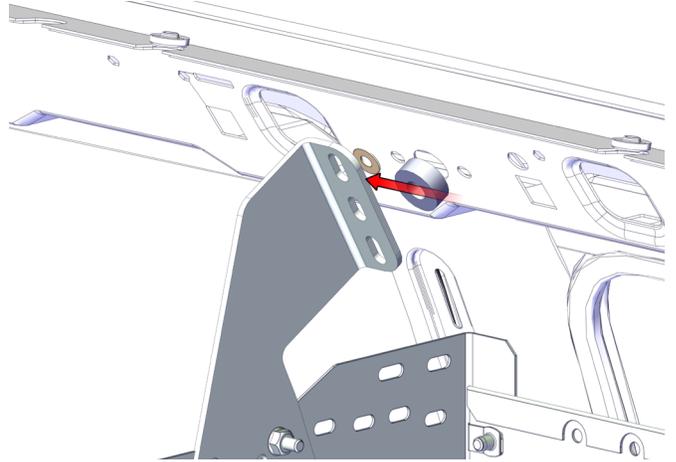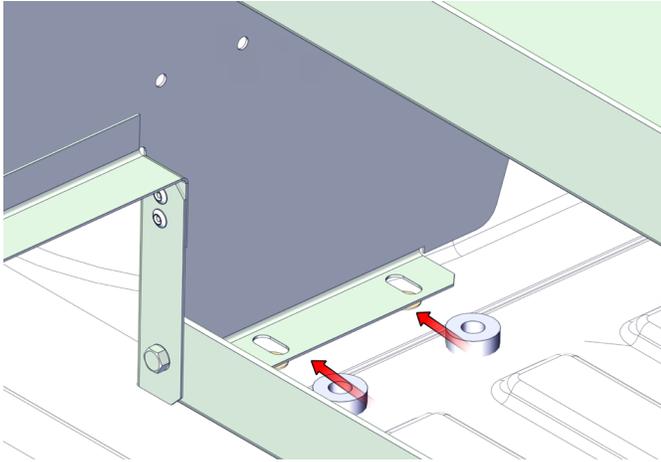

6.

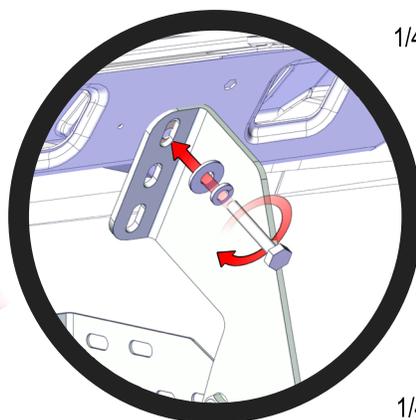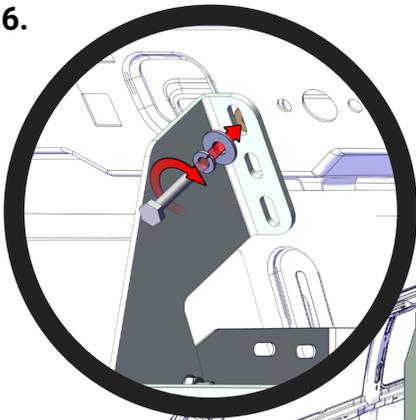

1/4" x 1 1/2" Zinc plated Hex Bolt




X6

1/4" Plated Zinc Lock Washer




X6

1/4" Plated Zinc Washer

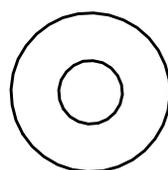


X6

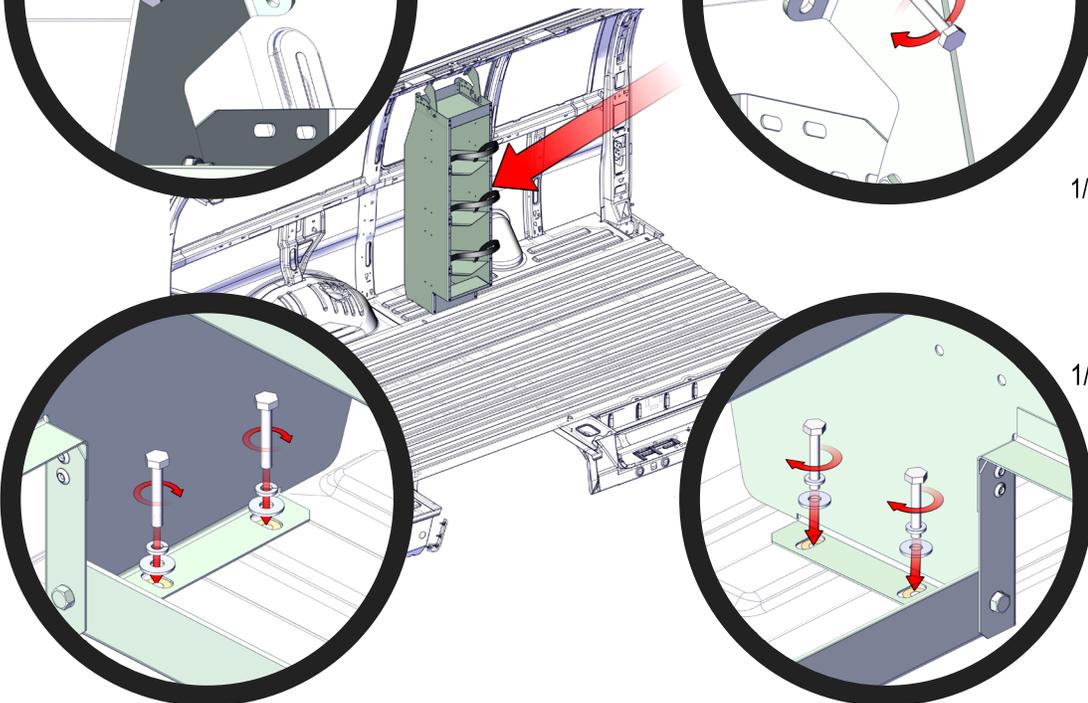


PRO-TIPS

WESTCANS PREMIUM STEEL PRODUCTS ARE ALL PART OF YOUR COMPLETE STORAGE SYSTEM. SHELVING UNITS, AND SELECT ACCESSORIES, CAN BE BOLTED TOGETHER THROUGH PRE-PUNCHED HOLES FOR A FLUSH, SEAMLESS, AND CONSISTENT INSTALLATION.

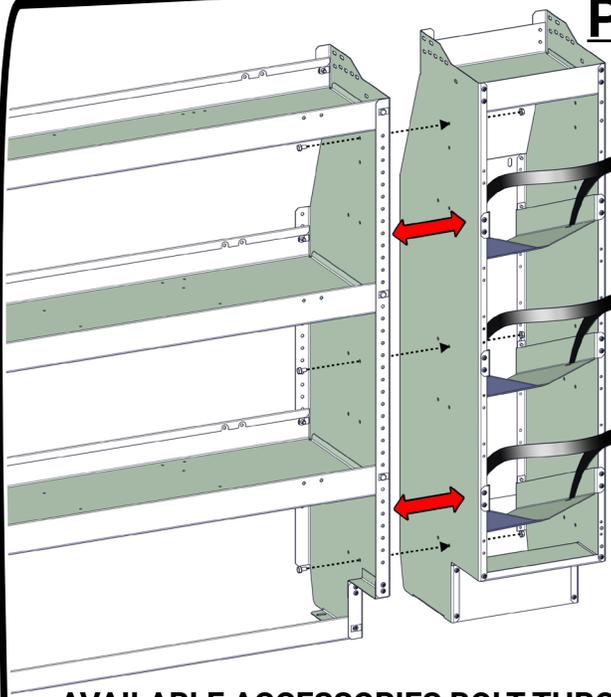


AVAILABLE ACCESSORIES BOLT THROUGH PRE-PUNCHED HOLES TO INCREASE THE FUNCTIONALITY OF YOUR SHELVING SYSTEM IN AN EASY TO INSTALL PACKAGE.

ACCESSORY HOOKS

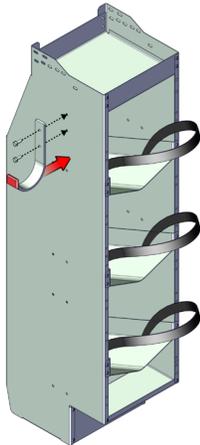

DOCUMENT STORAGE

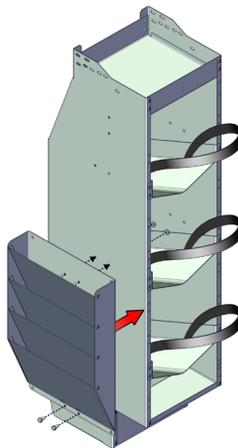

CYLINDER MOUNT

