



INSTALLATION INSTRUCTIONS: 47" HIGH PREMIUM STEEL GARMENT LOCKER

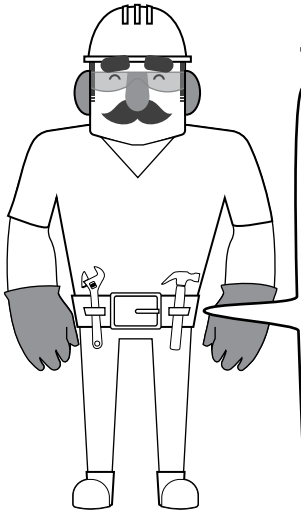

TOOLS NEEDED:

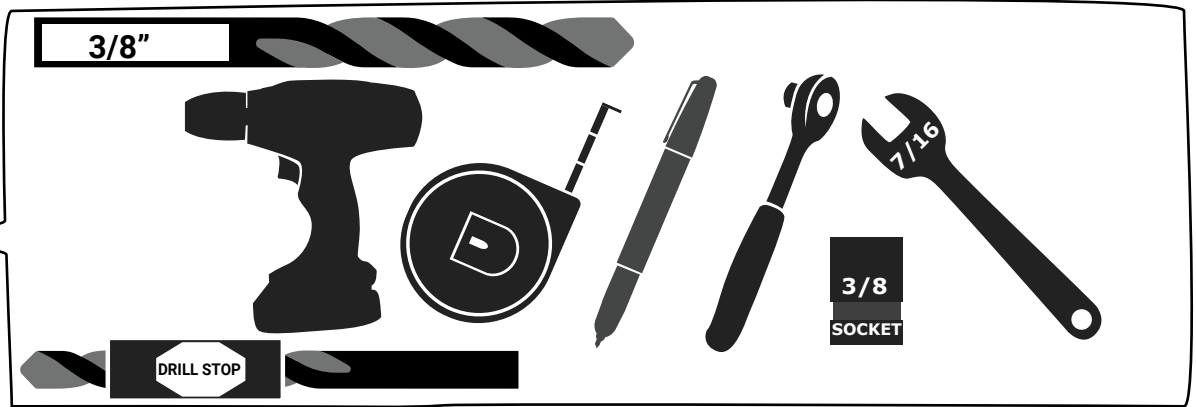


CAUTION:

This equipment is designed to be professionally installed by an approved upfitter. Always wear the appropriate Personal Protection Equipment as outlined by your local government and exercise caution when installing Westcan Manufacturing products. Westcan Manufacturing is not responsible for any damage done to the vehicle resulting from a poorly planned and/or executed installation. Both the installer and vehicle owner accept responsibility to properly install and operate Westcan Manufacturing products.

THESE INSTRUCTIONS APPLY TO PART NUMBER

- 41-4640

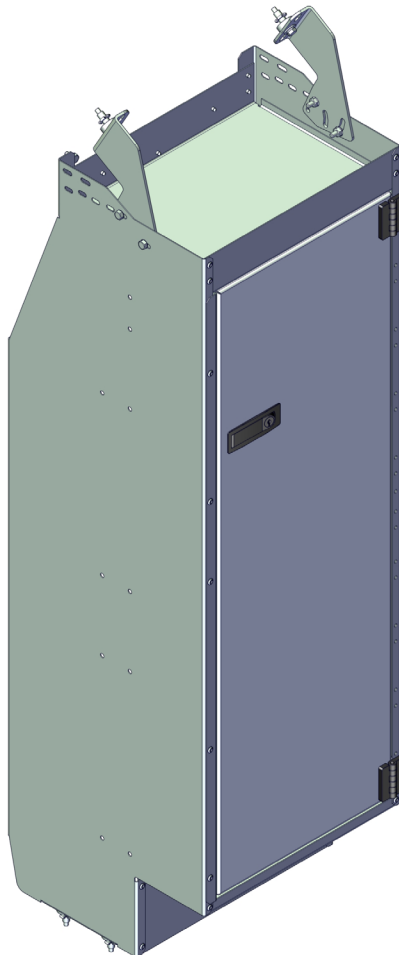

PREPARATION:

1. Ensure all parts are present and accounted for before installation. Plan the location of your installation ahead of time. Make sure your installation location does not impede any other components you are installing or damage the safety and functionality of your vehicle.
2. Every installation is different and can present its own unique challenges. Some hardware and interior trim may need to be altered to fit unique applications.
3. Exercise extreme diligence when drilling holes into a motor vehicle. Increasing complexity and model year changes can alter the location of fuel, hydraulic and electrical lines. Please visually inspect all locations prior to drilling.

CAUTION:

4. Use drill stops whenever drilling a hole in your vehicle. Set the drill stop depth to the minimum effective depth required to drill the hole.

INSERT NUT INSTALLATION:

**REFER BACK
WHEN INSERT
NUT IS USED.**



Insert Nut For Up To 1/4" Thick Material.

Drill A 3/8" Hole For Insert Nut

Exposed Metal Floor or Rib.

1" Counter-bore Through Plywood Floor or Rubber Floor Mat and Install 1" Aluminum Spacers.


Black 1/4" X 2-1/4" Install Bolt

1/4" Washer

Install Tool


Insert Nut

- Torque to 25 ft-lb to fully collapse the insert nut.

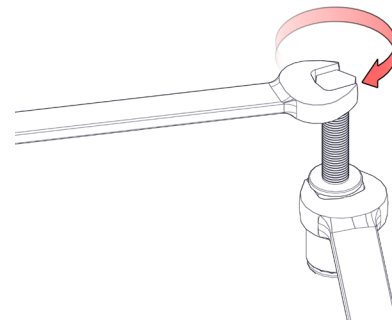


1.


EXPRESS/SAVANA UPPER MOUNT POSITION

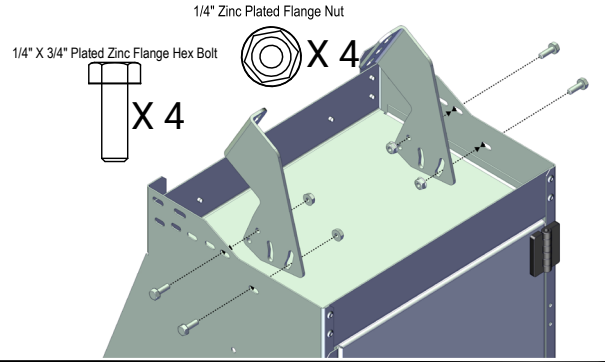


TRANSIT LOW ROOF UPPER MOUNT POSITION

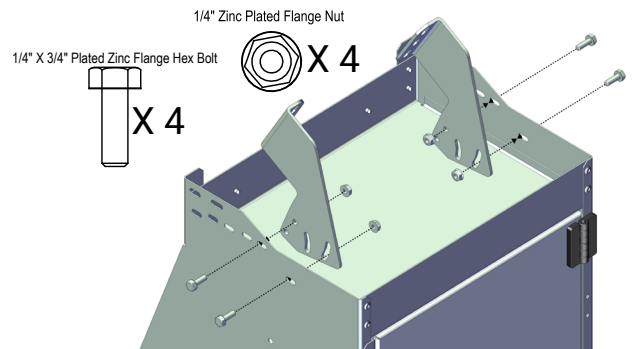






NV LOW ROOF UPPER MOUNT POSITION

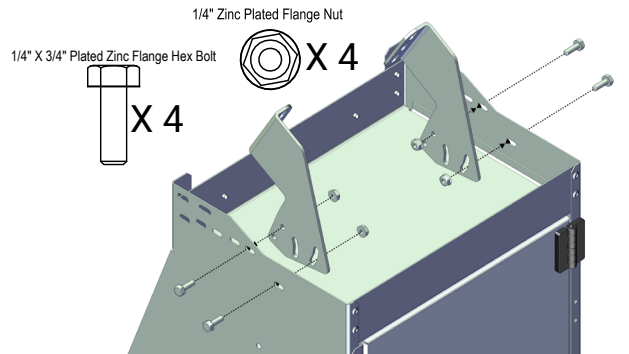


METRIS UPPER MOUNT POSITION

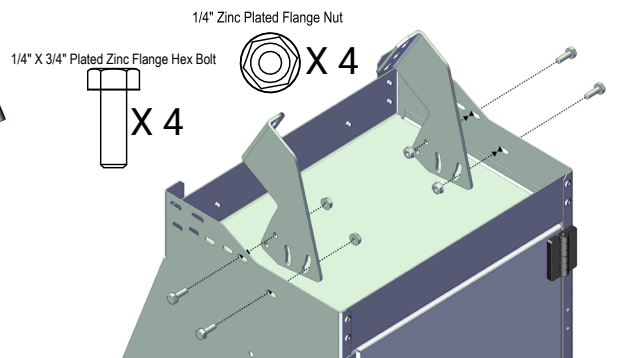


2. TYPICAL INSTALLATION SHOWN; VISUAL DETAILS MAY VARY FROM YOUR INSTALLATION.

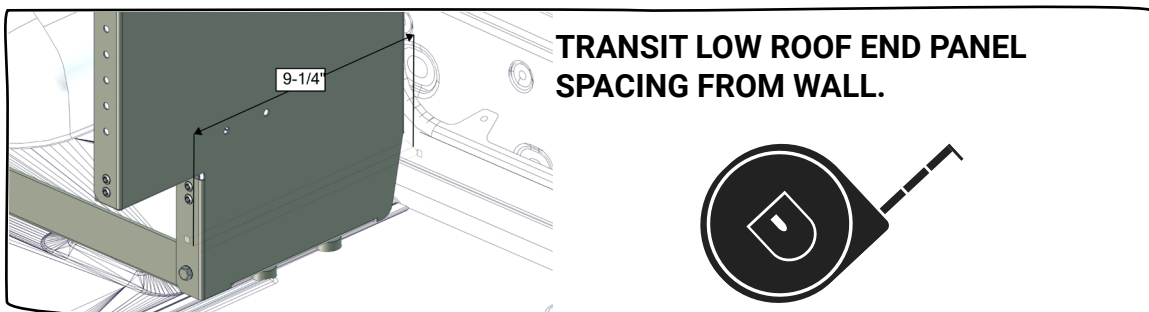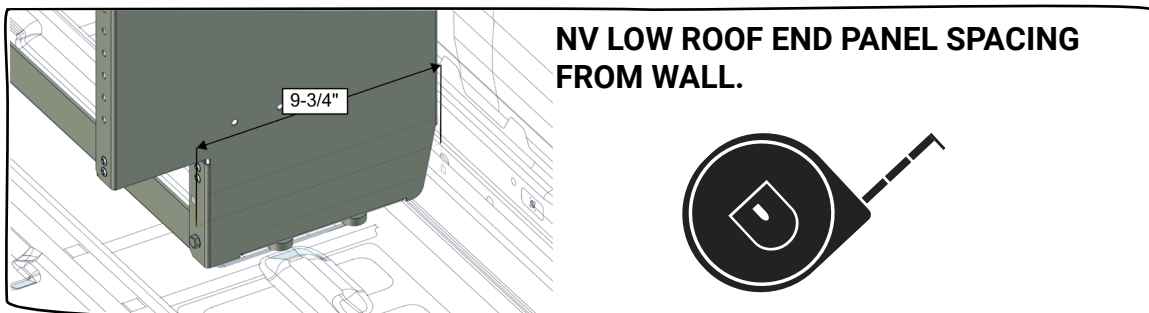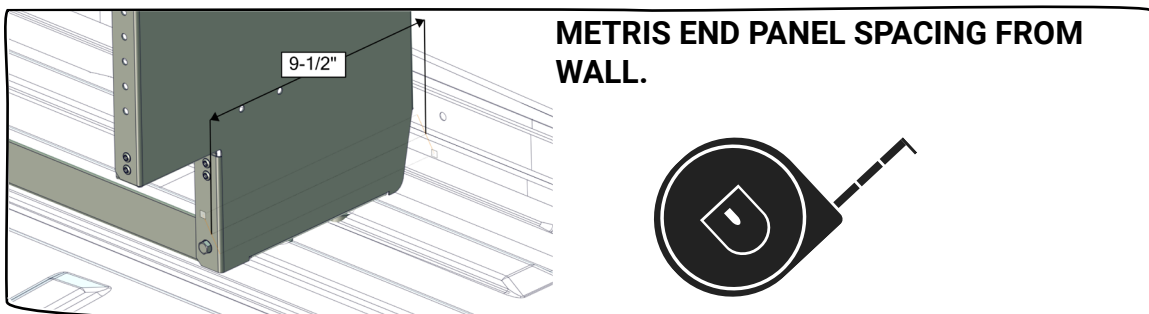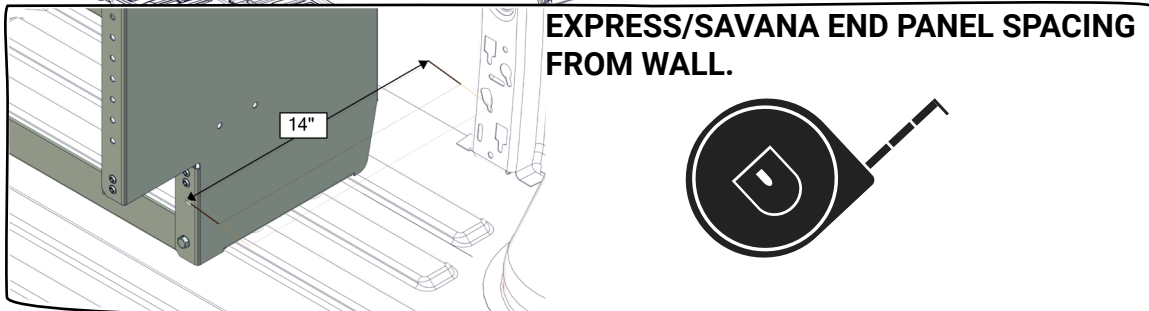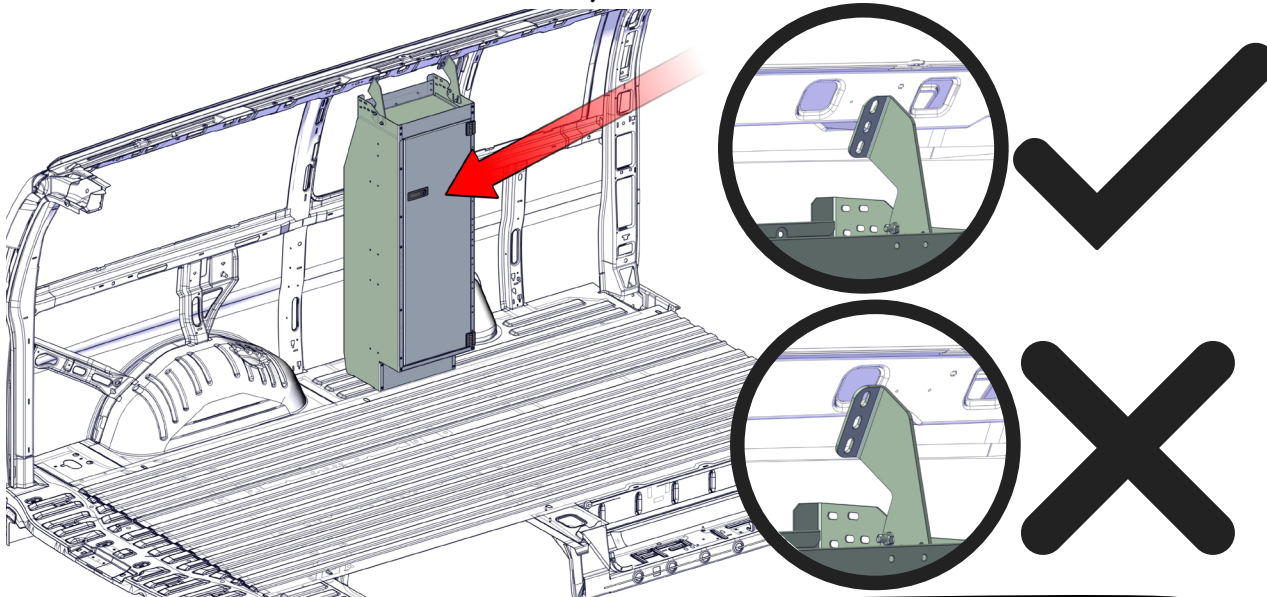


3.

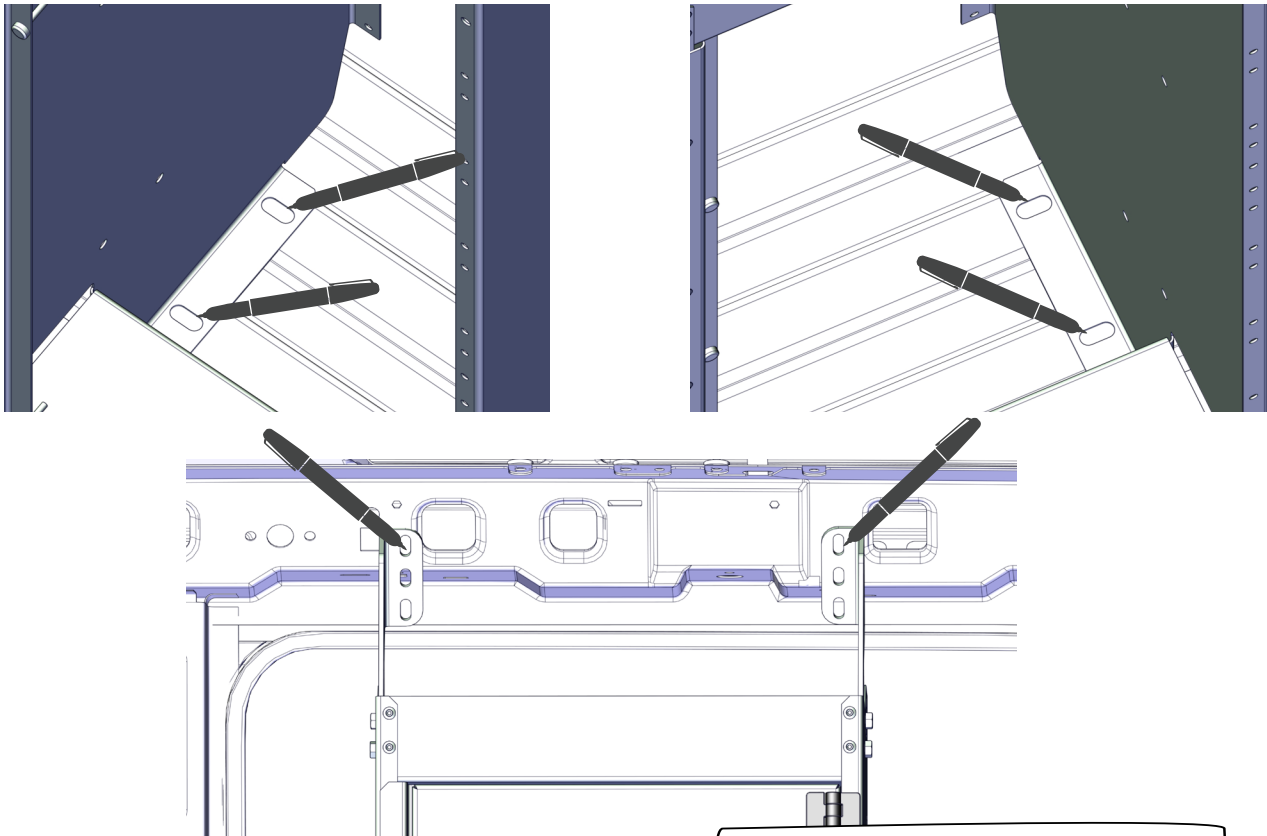

4.

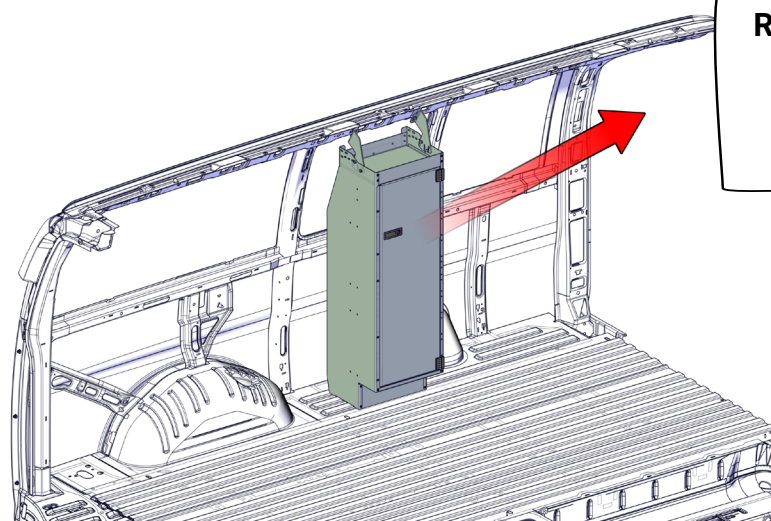


**REMOVE UNIT AND THROUGH
DRILL MARKED LOCATIONS
WITH A 3/8" DRILL BIT FOR
INSERT NUTS.**

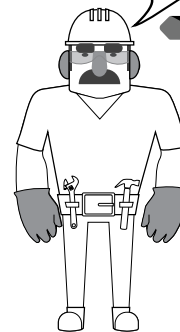


5.

1/4" - 20 Zinc Plated Insert Nut

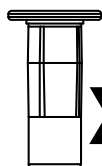


SEE PAGE 2 FOR THE INSERT NUT INSTALL PROCEDURE.

X6


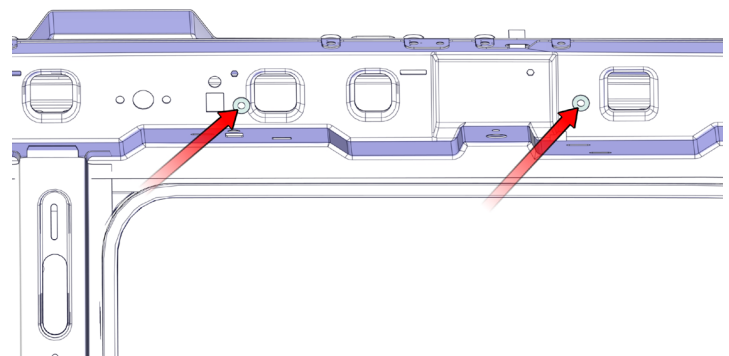


PRO-TIPS



IF THE END PANEL MOUNTING SLOTS DO NOT REST ON A FLOOR RIB: USE THE PROVIDED SPACERS WHEN MOUNTING TO THE FLOOR.

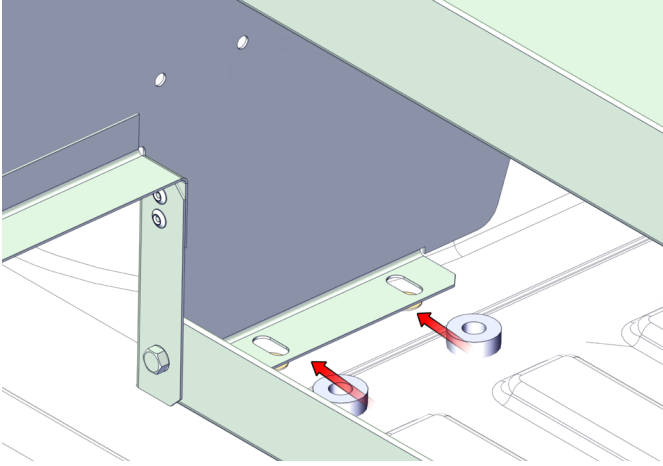

IF THE BRACKET DOES NOT SIT FLUSH TO THE CEILING RIB: USE THE PROVIDED SPACERS WITH THE UPPER MOUNTING BRACKET.

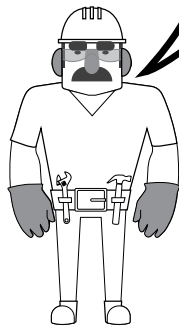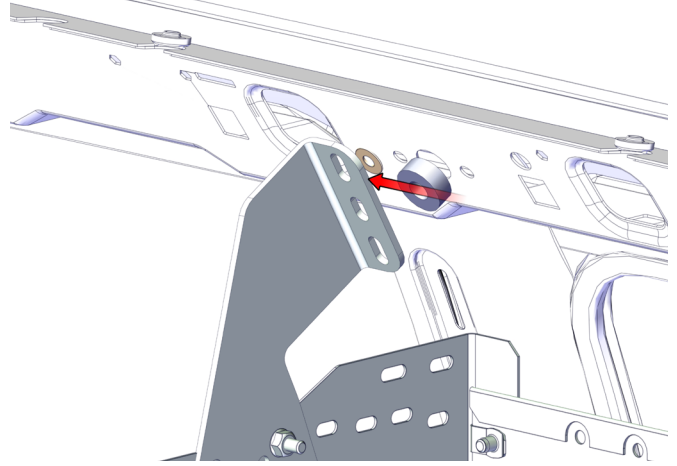

6.

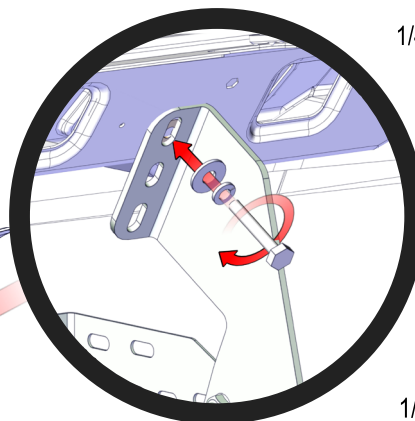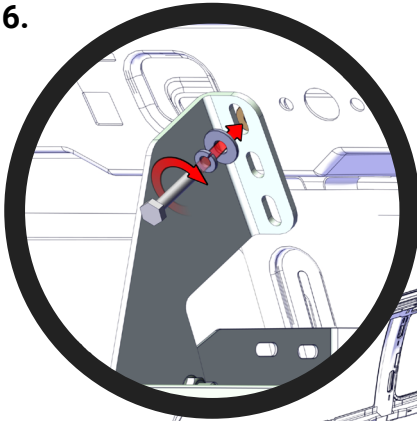

1/4" x 1 1/2" Zinc plated Hex Bolt




X6

1/4" Plated Zinc Lock Washer





X6

1/4" Plated Zinc Washer

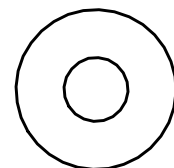


X6

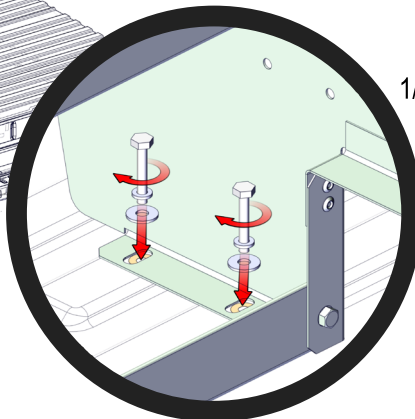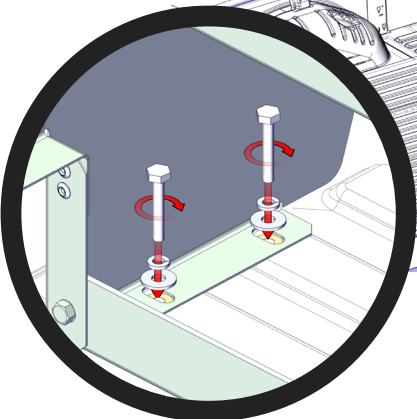


PRO-TIPS

WHEN PROPERLY INSTALLED, SHELVING UNITS AND OTHER SELECT ACCESSORIES, CAN BE BOLTED TOGETHER THROUGH PRE-PUNCHED HOLES FOR A FLUSH INSTALLATION.

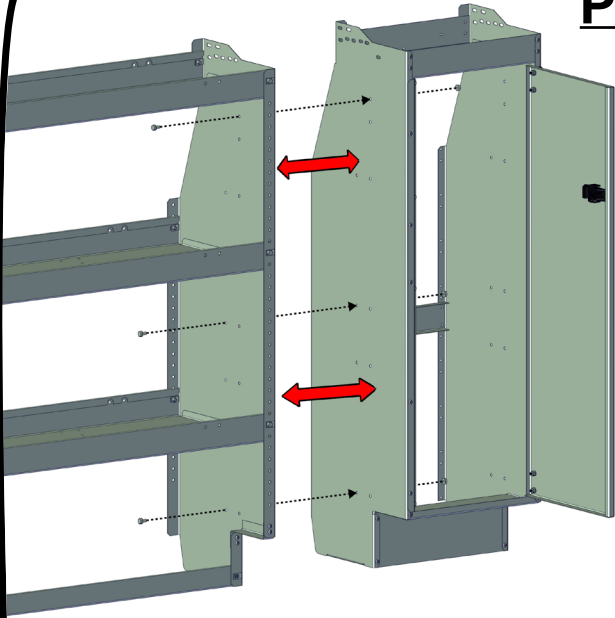


AVAILABLE ACCESSORIES BOLT THROUGH PRE-PUNCHED HOLES TO INCREASE THE FUNCTIONALITY OF YOUR SHELVING SYSTEM IN AN EASY TO INSTALL PACKAGE.

ACCESSORY HOOKS

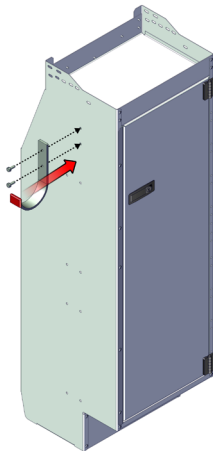

DOCUMENT STORAGE

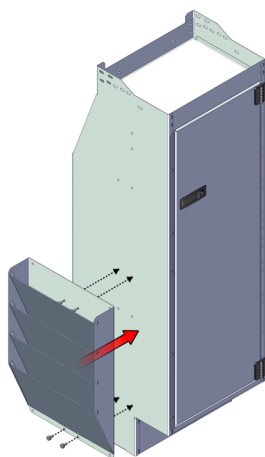

CYLINDER MOUNT

